



Colour Television

OWNER'S MANUAL

Please read this manual carefully before operating your set. Retain it for future reference.

Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

Model number : _____
Serial number : _____

P/NO : 3828VA0023B (PC53A, 224V/230C TX, 3828VA0023C, 486-399B, 373-026F)

**FOR THE GUARANTEE TERMS & CONDITIONS,
PLEASE REFER TO BACK COVER OF THIS MANUAL**

Contents

Installation	3
Location and function of controls	4
Remote control handset	
Battery installation	
Front panel	
Basic operation	7
On and off	
Programme selection	
Volume adjustment	
Mute function	
Quick view	
On screen language selection	
On screen menus	8
Menu selection	
Setting up TV stations	9
Auto programme tuning	
Manual programme tuning	
Fine tuning	
Programme edit	
Picture adjustment	13
Other functions	14
TV and AV modes	
Lock on/off	
Sleep timer	
Calling a programme list	
Teletext (option)	16
Switch on/off	
List mode	
FASTEXT mode	
Special teletext functions	
Connection of external equipment	18
Aerial socket	
Euro scart socket(s)	
Troubleshooting check list	19

Installation

Power

This set operates on a mains supply of 230V AC, 50Hz. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

Wiring

This set is supplied with a BS 1363 approved 13 amp mains plug, fused at 5 amp. When replacing the fuse always use a 5 amp BS 1362, BSI or ASTA approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer or "LG Electronics U.K. Ltd."

If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning

A mains plug removed from the mains lead of this set must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket.

Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol $\perp$ or coloured green or green and yellow.

If any other plug is fitted, use a 5 amp fuse, either in the plug, or at the distribution board.

Important

The wires in this mains lead are coloured in accordance with the following codes:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this set may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

Aerial

Connect the aerial cable to the socket marked 75Ω on the back cover. For the best reception an outdoor aerial should be used.

Location


Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back.

Location and function of controls

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the front panel of the set.

Remote control handset

Before you use the remote control handset, please install the batteries. See the next page.

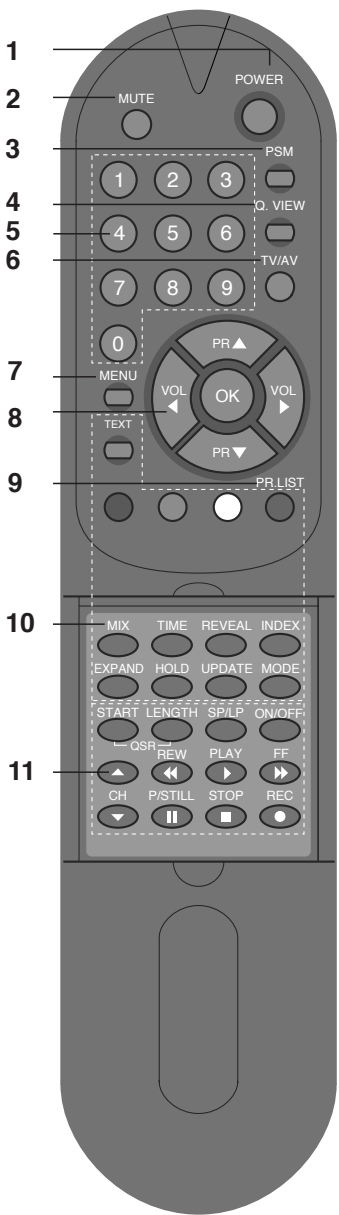

(With TELETEXT)


- 1. POWER**
switches the set to standby.
- 2. MUTE**
switches the sound on or off.
- 3. PSM (Picture Status Memory)**
recalls your preferred picture setting.
- 4. QUICK VIEW**
returns to the previously viewed programme.
- 5. NUMBER BUTTONS**
switch the set on from standby or directly select a number.
- 6. TV/AV**
selects TV or AV mode.
- 7. MENU**
selects a menu.
- 8. ▲ / ▼ (Programme Up/Down)**
switches the set on from standby.
selects a programme or a menu item.
◀ / ▶ (Volume Down/Up)
adjusts the volume.
adjusts menu settings.
OK
accepts your selection or displays the current mode.

Location and function of controls


- 9. **PR.LIST**
displays or clears the programme list.
- 10. **TELETEXT BUTTONS (option)**
These buttons are used for teletext.
For further details, see the 'Teletext' section.
- 11. **VCR BUTTONS (option)**
control a GoldStar video cassette recorder.
- * **NO FUNCTION BUTTONS**

Battery installation

The remote control handset is powered by two AA type batteries. Gently pull down the cover of the remote control handset until the battery compartment is exposed. Install two batteries as indicated by the polarity symbols(⊕ and ⊖) marked inside the compartment.

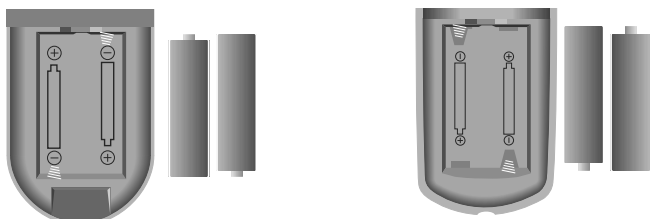


Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

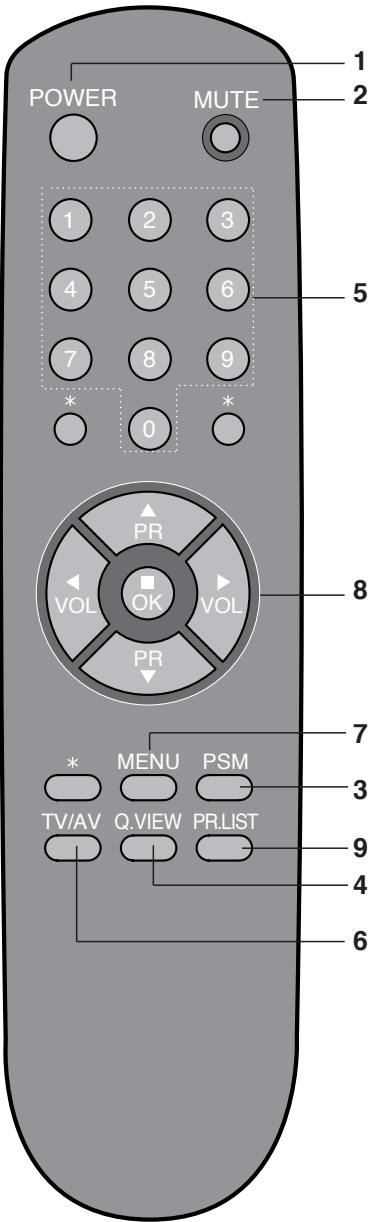

(Without TELETEXT)

Location and function of controls

Front panel

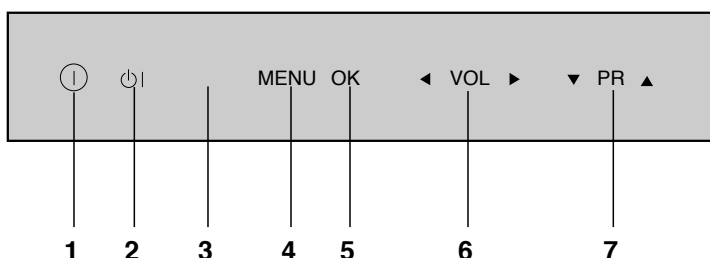

- 1. MAIN POWER**
switches the set on or off.
- 2. POWER/STANDBY INDICATOR**
illuminates brightly when the set is in standby mode.
dims when the set is switched on.
- 3. REMOTE CONTROL SENSOR**
- 4. MENU**
selects a menu.
- 5. OK**
accepts your selection or displays the current mode.
- 6. VOLUME UP/DOWN**
adjusts the volume.
adjusts menu settings.
- 7. PROGRAMME UP/DOWN**
switches the set on from standby.
selects a programme or a menu item.

Basic operation

On and off

1. Press the main power button to switch the set on.
2. If the set is in standby mode, press the ▲ / ▼ or NUMBER buttons on the remote control handset to switch it on fully.
3. Press the **POWER** button on the remote control handset.
The set reverts to standby mode.
4. Press the main power button again to switch the set off and the power/standby indicator goes out in a few seconds.

Note :

- a. If, while the set is switched on, the mains plug is disconnected the set will switch to standby or power on when the mains plug is replaced in the mains power socket.
- b. If no signal is received for about 10 minutes, the set will automatically switch itself to standby mode.

Programme selection

You can select a programme number with the ▲ / ▼ or NUMBER buttons.

Volume adjustment

Press the ◀ / ▶ button to adjust the volume.

Press the **OK** button to store the volume in your standard level.

Mute function

Press the **MUTE** button. The sound is switched off and the display  appears. You can cancel it by pressing the **MUTE** or ◀ / ▶ button.


Quick view

Press the **Q.VIEW** button to view the last programme you were watching.

On screen language selection

The menu can be displayed on the screen in English, German or French. First select your language.

1. Repeatedly press the **MENU** button to select MENU 2.
2. Press the ▲ / ▼ button to select **Language**.
3. Press the ◀ / ▶ button to select the desired language.
All the on screen displays will appear in the selected language.
4. Press the **OK** button to return to normal TV viewing.

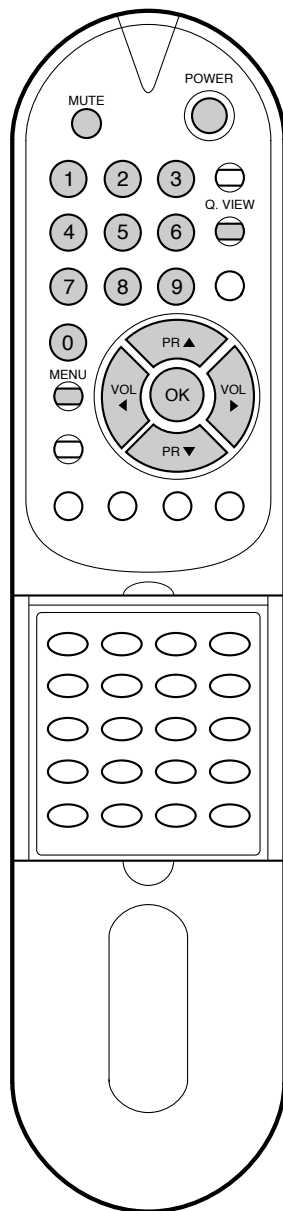

On screen menus



The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

Menu selection

1. Repeatedly press the **MENU** button to display each menu.
2. Press the **▲ / ▼** button to select a menu item.
The selected menu item changes from green to purple.
3. Press the **◀ / ▶** button to change the setting of a menu item or
OK button to display the sub menu.

Note :

- The menus automatically disappear in about 15 seconds if you do not press a button. However if you press the **MENU** button again, the last selected menu will appear with your selected menu item.
- In the AV mode, MENU 3 is not displayed.
- In the teletext mode, MENU1 to 3 are not displayed.

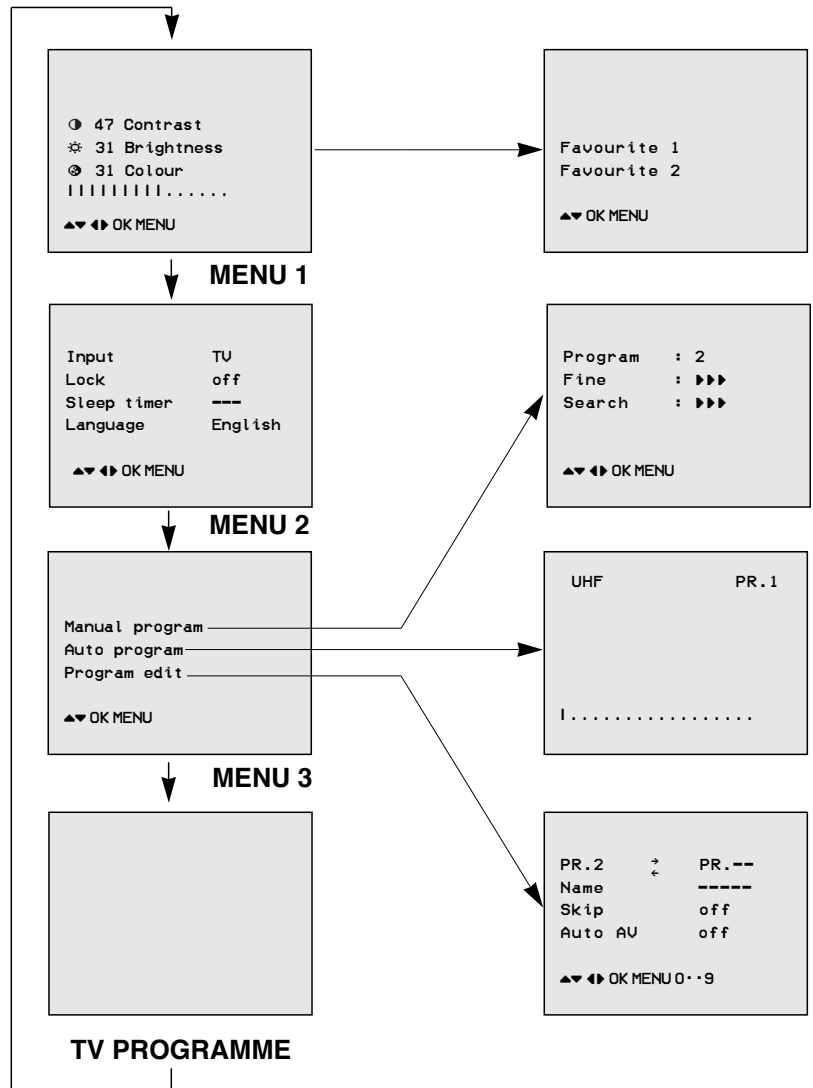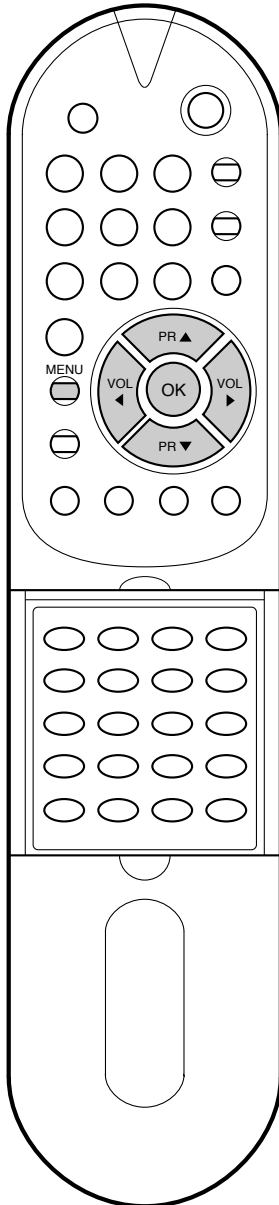

Setting up TV stations

Up to 60 TV stations can be stored in this set by programme numbers (0 to 59). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you programmed.

Stations can be tuned using automatic or manual modes.

Please ensure that your VCR, Satellite Receiver or Cable TV Decoder are connected, switched on and were applicable have their test signals switched on before tuning the TV. It may however be necessary to Manually tune and then Fine tune the TV to receive signals from these sources.

Auto programme tuning

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

1. Repeatedly press the **MENU** button to select MENU 3.
2. Press the ▲ / ▼ button to select **Auto program**.
3. Press the **OK** button to begin auto programming.

Option :

Dual standard models, the band automatically changes

VHF-L → VHF-H → UHF.


When auto programming is completed, the station stored into programme number 1 will appear on the screen.

To stop auto programming, press any button. The active programme at that time will be displayed.

Note : Some undesired stations may be stored, such as noisy or unclear signals from distant transmitters. You can easily skip these stations by entering **Program edit** mode.



MENU 3

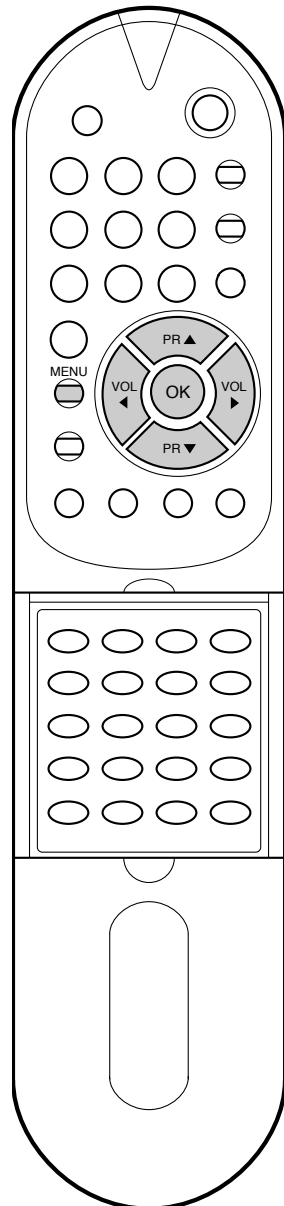


Setting up TV stations

MENU 3

Manual program
Auto program
Program edit

▲▼ OK MENU

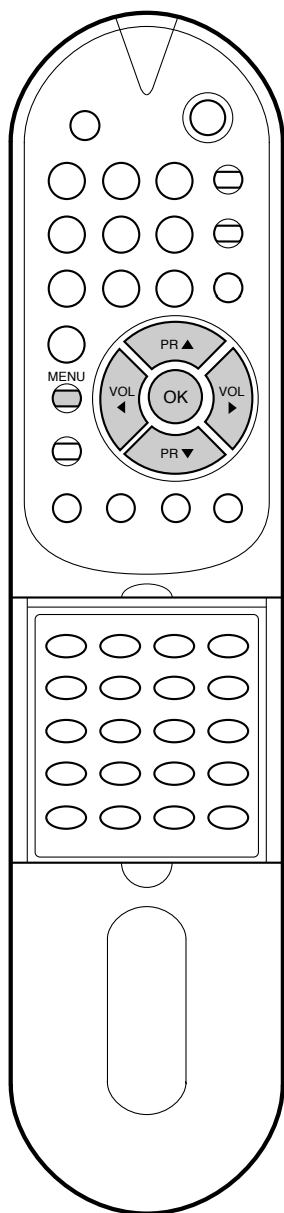

Manual programme tuning

Manual programme lets you manually tune and arrange the stations in whatever order you desire.

1. Repeatedly press the **MENU** button to select MENU 3.
2. Press the **▲ / ▼** button to select **Manual program**.
3. Press the **OK** button to display the **Manual program** mode.

Program : 2
Fine : ►►►
Search : ►►►

▲▼ ◀▶ OK MENU

4. Press the **▲ / ▼** button to select **Program**. Select the desired programme number with the **◀ / ▶** button.

Option :

Dual standard models, the display **Band** appears below **Search**.

In that case, press the **▲ / ▼** button to select **Band** then select **VHF-L**, **VHF-H** or **UHF** as required with the **◀ / ▶** button.

5. Press the **▲ / ▼** button to select **Search**. Press the **◀ / ▶** button to commence searching. If a station is found the search will stop. To stop the search at any time press any button.
6. If this station is the one required, press the **OK** button if not press the **◀ / ▶** button again.
7. To store another station repeat steps 4 to 6.
8. Press the **MENU** button twice to return to normal TV viewing.

Fine tuning

Normally fine tuning is only necessary if reception is poor.


1. Repeat steps 1 to 3 above.
2. Press the **▲ / ▼** button to select **Fine**. Press the **◀ / ▶** button to fine tune for the best picture and sound.
3. Press the **OK** button to store the new setting.
4. Press the **MENU** button twice to return to normal TV viewing. The finely tuned programme will be indicated by yellow number during programme selection.

Setting up TV stations

Programme edit

This function enables you to rearrange the programmes stored by auto programming in whatever order you desire. Also you can skip particular programme numbers stored by auto programming or it is possible to assign a station name with five characters to each programme number.

- 1. Repeatedly press the **MENU** button to select MENU 3.
- 2. Press the **▲ / ▼** button to select **Program edit**.
- 3. Press the **OK** button, and the **Program edit** mode will appear.

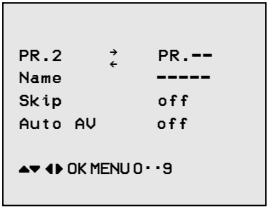

Exchanging programmes

- 1. Press the **◀ / ▶** button to change the left hand programme number. The viewing station corresponding to the new programme number is shown on the screen.
- 2. Press the **NUMBER** buttons to enter the desired right hand programme number. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 3. Press the **OK** button. The station stored in the right hand programme number will now appear as the left hand programme number.
- 4. Repeat steps 1 to 3 to exchange other programmes.

Assigning a station name

- 1. Select the programme to which you want to assign a station name with the **◀ / ▶** button.
- 2. Press the **▲ / ▼** button to select **Name**.
- 3. Press the **◀ / ▶** button.

At this time, one character position bar may blink or all five character bars blink. One is to assign your desired station name and the other is to select the factory preset station name.



You can select either.

To select the desired station name which has already been preset at the factory, press the **▲ / ▼** button continuously.

The preset station names are listed below;

BBC1	WDR3	3sat	-----	S+
BBC2	BR3	RTL2	MTV	ORF1
ITV	HR3	Kabel	n-tv	ORF2
CH4	N3	Premiere	UIVA	ORF3
TF1	SWF3	DSF	TU5	RAI1
FR2	SFB3	ARTE	SuperCH	RAI2
FR3	MDR3	B1	VOX	RAI3
Canal+	RB3	BLN.MIX1	DRS	NDL1
Cinq.	ORB3	OFF.CANAL	TSR	NDL2
M6	RTL	TRT-INT	TSI	NDL3
ARD	Sat1	Eurosport	SPORT	
ZDF	Pro7	CNN	SERVICE	

MENU 3

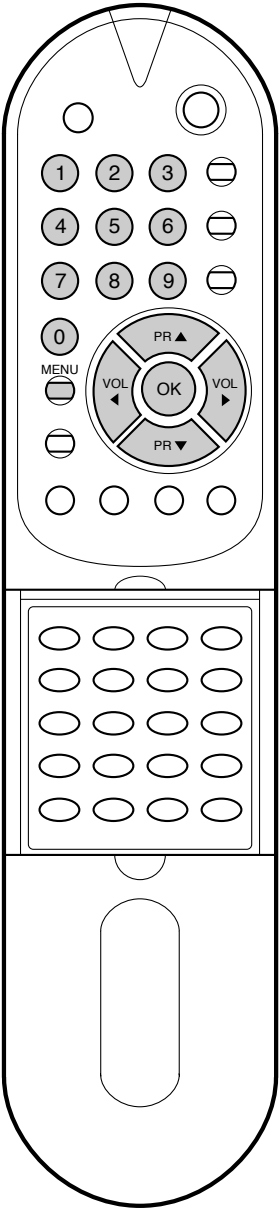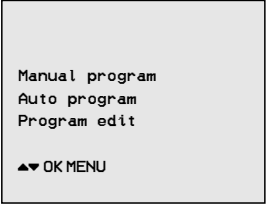


Setting up TV stations

MENU 3

Manual program
Auto program
Program edit

▲▼ OK MENU

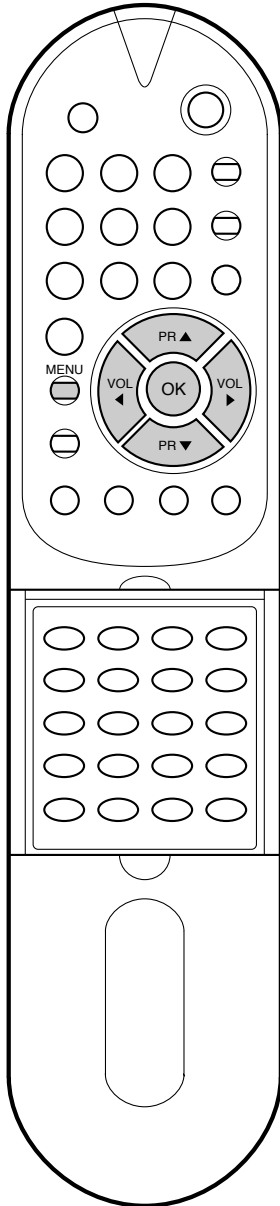

Option :

Dual standard models, the preset station names are listed below;

-----	S+	ITV	HR3	Kabel
MTV	ORF1	CH4	N3	Premiere
n-tv	ORF2	TF1	SWF3	DSF
VIVA	ORF3	FR2	SFB3	ARTE
TU5	RAI1	FR3	MDR3	B1
SuperCH	RAI2	Canal+	RB3	BLN.MIX1
VOX	RAI3	Cinq.	ORB3	OFF.CANAL
DRS	NDL1	M6	RTL	TRT-INT
TSR	NDL2	ARD	Sat1	Eurosport
TSI	NDL3	ZDF	Pro7	CNN
SPORT	BBC1	WDR3	3sat	
SERVICE	BBC2	BR3	RTL2	

If you want to assign your desired station name, follow steps 4 to 6 below.

4. To select your desired first character, press the ▲ button several times or continuously. The - will blink, followed by the alphabet **A** to **Z**, **.**, **+**, the numeric **0** to **9**, a blank in turn. With the ▼ button you can select in the opposite direction.
5. Select the next position by pressing the ► button and then take your choice of the second character, and so on.
6. When you get to the fifth position after selecting a character press the **OK** button, otherwise your station name will be erased if you press the ► button again.
7. Repeat steps 1 to 6 to assign another station name.

Note : Single standard models, when auto programming has been carried out, a station name can be assigned to each of programme 1 to 4. If **Name** is selected, the station name **BBC1** for programme 1, **BBC2** for 2, **ITV** for 3 and **CH4** for 4 appear. If you want to store the station name press the **OK** button.

Skipping a stored programme

1. Press the ◀ / ▶ button to select the programme you want to skip. The viewing station corresponding to the selected programme number is shown on the screen.
2. Press the ▲ / ▼ button to select **Skip**.
3. Press the ◀ / ▶ button to select **on** or **off**.
If you select **on**, the selected station is skipped.
4. Press the **OK** button.
5. Repeat steps 1 to 4 to skip another programme.
The selection of the skipped programme numbers with the **NUMBER** buttons is still possible and they will be indicated by blue numbers during programme selection.

Auto AV setting

If your VCR outputs a switching voltage when it is switched to playback, select **Auto AV on** with the VCR connected to Euro scart 1. The set is automatically switched to AV1 (AV) mode when an AV signal is input. But if you want to keep on watching TV mode, set **Auto AV** to **off**.


1. Press the ◀ / ▶ button to select your desired programme number.
2. Press the ▲ / ▼ button to select **Auto AV**.
3. Press the ◀ / ▶ button to select **on** or **off**.
4. Press the **OK** button.
5. Repeat steps 1 to 4 to set another programme.

Press the **MENU** button twice to return to normal TV viewing.

You can adjust picture contrast, brightness and colour intensity to the levels you prefer.

- 47 Contrast
 31 Brightness
 31 Colour
 |||||.....
 ▲▼◀▶ OK MENU

4. Press the **OK** button.

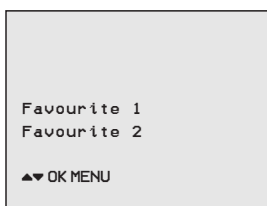


-
- The diagram shows the front panel of the remote control, divided into two main sections. The top section contains a variety of control buttons: a small circle at the top, a larger circle with a horizontal line labeled "PSM", a 4x3 grid of small circles, a "MENU" button, a central circular navigation pad with "PR ▲", "PR ▼", "VOL ▲", "VOL ▼", and "OK" buttons, and another 4x3 grid of small circles at the bottom. The bottom section features a numeric keypad with 12 oval buttons arranged in a 4x3 grid, and a large, vertically-oriented oval button at the very bottom.

13

Other functions

MENU 2

Input	TV
Lock	off
Sleep timer	---
Language	English
▲▼◀▶ OK MENU	

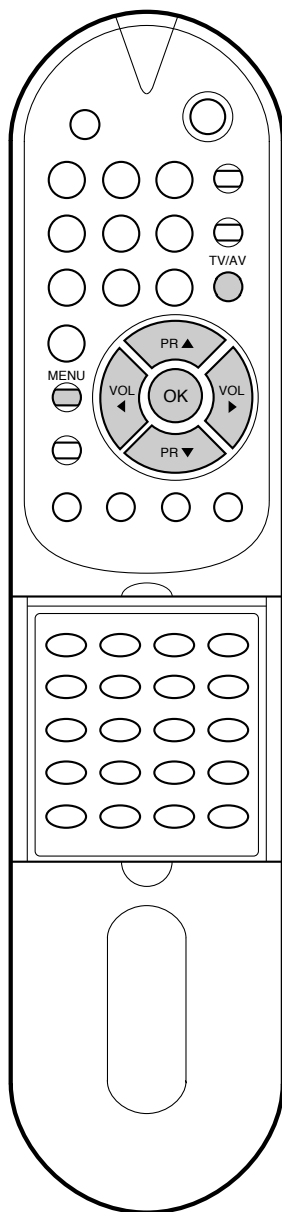

TV and AV modes

Inputs can be set for TV or AV mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

Note : When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.

1. Repeatedly press the **MENU** button to select MENU 2.
2. Press the **▲ / ▼** button to select **Input**.
3. Press the **◀ / ▶** button to select **TV**, **AV1 (AV)** or **AV2**.

The two AV modes are :

AV 1 (AV) : VCR connected to the Euro scart socket 1 on the back

AV 2 : VCR connected to the Euro scart socket 2 on the back

Option :

In some models, AV2 (and Euro scart 2) is an optional function. Only a set with the AV2 (and Euro scart 2) can perform this function.

4. Press the **OK** button.

Alternatively you can select the TV or AV mode by pressing the **TV/AV** button.

Lock on/off

The TV can be set so that the remote control handset is needed to control it.

This feature can be used to prevent unauthorised viewing.

1. Repeatedly press the **MENU** button to select MENU 2.
2. Press the **▲ / ▼** button to select **Lock**.
3. Press the **◀ / ▶** button on the remote control handset to select **on** or **off**.
4. Press the **OK** button to return to normal TV viewing.

With the lock on, the display **Lock on** appears on the screen if any button on the front panel is pressed while viewing the TV.

Sleep timer

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time elapses.

1. Repeatedly press the **MENU** button to select MENU 2.
2. Press the **▲ / ▼** button to select **Sleep timer**.
3. Press the **◀ / ▶** button to select the number of minutes. The display --- will appear on the screen, followed by **240, 180, 120, 90, 60, 30, 20** and **10**.
4. Press the **OK** button to return to normal TV viewing. The timer begins to count down from the number of minutes selected.

Note :

- a. To view the remaining sleep time, select menu 2.
- b. To cancel the sleep time, set the sleep time to ---.
- c. When you switch the set off, the set releases the preset sleep time.

Other functions

Calling a programme list

You can check the programmes stored in the memory by displaying the programme list.

Displaying programme list

Press the **PR.LIST** button.

The programme list mode is displayed on the screen. One programme list contains ten programmes as below.

00 -----	05 -----
01 -----	06 -----
02 -----	07 -----
03 -----	08 -----
04 -----	09 -----
▲▼ ◀▶ OK PR.LIST	

Note :

- You may find some blue programme numbers with no station name character. They are skipped during auto programming or in the Program edit mode.
- Some programme numbers with the mark ----- shown in the programme list indicate there is no station name assigned.

Selecting a programme in the programme list

Select upper or lower programme with the ▲ / ▼ button and left or right programme with the ◀ / ▶ button. The colour of normal programmes is green and the chosen programme is shown in purple.

Then press the **OK** button.


The set switches to the chosen programme number.

Paging through a programme list

There are six programme list pages which contain 60 programmes. Pressing the ▲ / ▼ or ◀ / ▶ button repeatedly turns the pages.

Switching back to TV mode

Press the **PR.LIST** button during programme list mode.

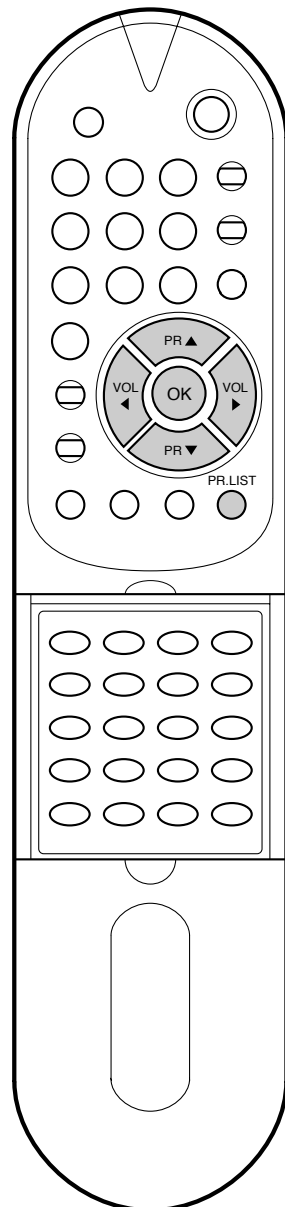


Teletext (option)

Teletext is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the LIST and FASTEXT systems. LIST (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. FASTEXT is more a modern method allowing quick and easy selection of teletext information.

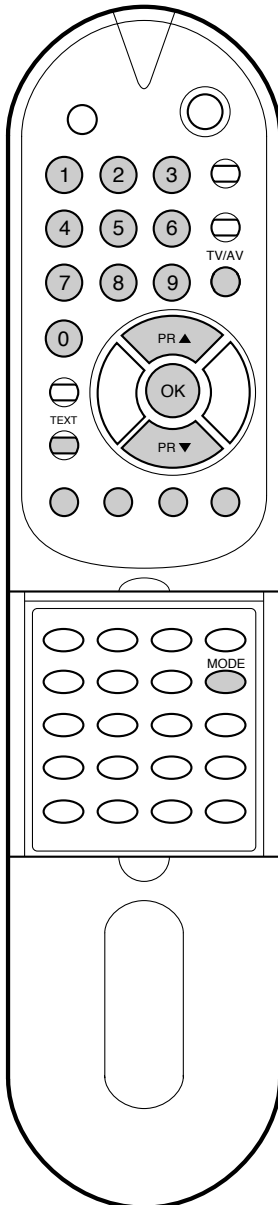

Switch on/off

Press the **TEXT** button to switch to teletext. The initial page or last selected page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** or **TV/AV** button to switch off teletext. The previous mode reappears.

LIST mode

If the TV is in FASTEXT mode, press the **MODE** button to switch to LIST mode.

Page selection

1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

Programming a colour button

Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

1. Using the **NUMBER** buttons, select the page you wish to programme.
2. Wait until the page is displayed on the screen and press the **OK** button. The page numbers in the colour boxes along the bottom of the screen change to ">000?".
3. Press a colour button to store the page number. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in the same way.

Teletext (option)

FASTEXT mode

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

Page selection

1. Press the **INDEX** button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the LIST teletext mode, you can select a page by entering its three digit page number with the **NUMBER** buttons in FASTEXT mode.
4. The **▲ / ▼** button can be used to select the preceding or following page.

Special teletext functions

REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.

EXPAND (SIZE)

Selects double height text.

Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.

UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display  will appear at the top left hand corner of the screen. When the updated page is available then display  will change to the page number.

Press this button to view the updated teletext page.

HOLD (STOP)

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.

To continue press this button again.


MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.

TIME


When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the **RED/GREEN**, **▲ / ▼** or **NUMBER** buttons. Press again to exit this function.

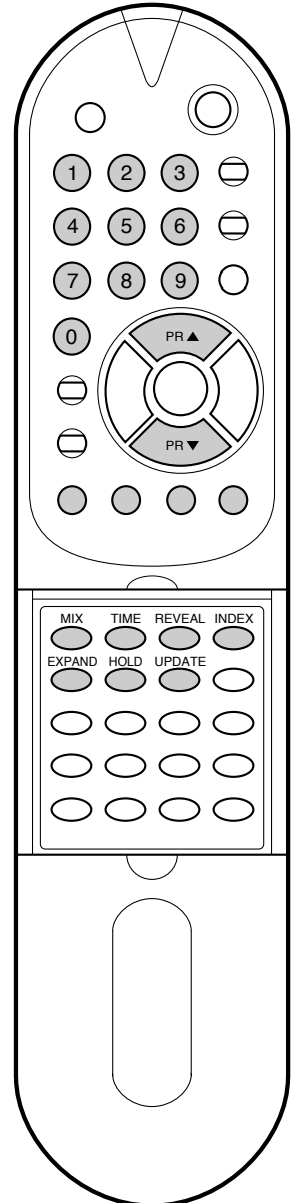

Connection of external equipment


You can connect additional equipment, such as VCRs, camcorders etc. to your set.

Aerial socket

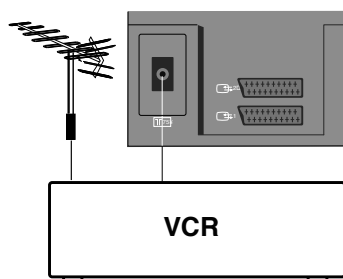

1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on a desired programme number using the 'Manual programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

Euro scart socket(s)

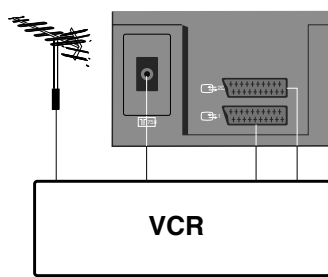

1. Connect the euro scart socket of the VCR to the Euro scart socket 1 or 2 of the set.
2. Press the **PLAY** button on the VCR.
If your VCR outputs a switching voltage connect to Euro scart socket 1. If **Auto AV on** is selected, the set will switch to AV1 mode automatically.
Otherwise, press the **TV/AV** button on the remote control handset to select **AV1 (AV)** or **AV2**. The VCR playback picture appears on the screen.


You can also record programmes received by the TV on video tape.

Note :

- a. Euro scart 2 (and AV2) is an optional function. Only a set with the Euro scart 2 (and AV2) can perform this function.
- b. Signal type RGB, i.e. the signals red, green and blue can only be selected for the Euro scart socket 1 (not Euro scart 2) with **Auto AV on**. These signals are transmitted, for example, by a computer, pay TV decoder, game machine or photo CD unit, etc.
To return to normal TV viewing, disconnect the RGB signal source.

Symptoms

Remote control does not work

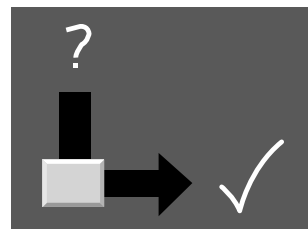

Check these items and try to adjust these

Check euro scart socket(s) (VCR only)

GoldStar

Technology with the human touch

GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee
1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
 2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this GoldStar equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

PLEASE NOTE:

- A. The dealer may restrict the guarantee to the original purchaser.
- B. The dealer is not obliged to carry out service under guarantee if unauthorised modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
- C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
- D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
- E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

● REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:

RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVIDED.

- Product Registration Card: It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable GoldStar to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance:

From the Republic of Ireland:

Call 01753 500470 Monday-Friday
9.00am-4.30pm

Call 00 44 1753 500470

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE *

* Please complete for your own record

In all cases of difficulty - consult your GoldStar dealer from whom the product was purchased